

# GRENFELL TOWER - SMOKE EXTRACT SYSTEM

## BASIC HOW TO USE GUIDE WHEN ACTIVATED

### CHECKING STATUS OF SMOKE DAMPERS

1. At Main Menu – press the 'STATUS SCREEN' button
2. Select the 'SMOKE DAMPER' option
3. See table on opposite page for location of each damper

### OVERRIDE FOR MANUAL CONTROL OF INDIVIDUAL FLOORS

1. Switch key on main panel from 'AUTO' to 'ON' setting
2. 2<sup>nd</sup> Key can be used in yellow 'SMOKE EXTRACT' key switch in each lift lobby to manually operate dampers on individual floors

**NOTE:** Only one floor can be manually controlled at a time

### RESETTING FIRE PANEL

1. At Main Menu – press the 'RESET FIRE SIGNAL' button

### IN CASE OF FALSE ALARM

1. At Main Menu – press the 'RESET FIRE SIGNAL' button

DAMPER ID		LOCATION
AOV 1		Ground Floor - Community Room Lobby
AOV 2		2 <sup>nd</sup> Floor - Boxing Club Lobby
SD 01	SD 02	Ground Floor Lift Lobby
SD 03	SD 04	1 <sup>st</sup> Floor Lift Lobby
SD 05	SD 06	2 <sup>nd</sup> Floor Lift Lobby
SD 07	SD 08	3 <sup>rd</sup> Floor Lift Lobby
SD 09	SD 10	4 <sup>th</sup> Floor Lift Lobby
SD 11	SD 12	5 <sup>th</sup> Floor Lift Lobby
SD 13	SD 14	6 <sup>th</sup> Floor Lift Lobby
SD 15	SD 16	7 <sup>th</sup> Floor Lift Lobby
SD 17	SD 18	8 <sup>th</sup> Floor Lift Lobby
SD 19	SD 20	9 <sup>th</sup> Floor Lift Lobby
SD 21	SD 22	10 <sup>th</sup> Floor Lift Lobby
SD 23	SD 24	11 <sup>th</sup> Floor Lift Lobby
SD 25	SD 26	12 <sup>th</sup> Floor Lift Lobby
SD 27	SD 28	13 <sup>th</sup> Floor Lift Lobby
SD 29	SD 30	14 <sup>th</sup> Floor Lift Lobby
SD 31	SD 32	15 <sup>th</sup> Floor Lift Lobby
SD 33	SD 34	16 <sup>th</sup> Floor Lift Lobby
SD 35	SD 36	17 <sup>th</sup> Floor Lift Lobby
SD 37	SD 38	18 <sup>th</sup> Floor Lift Lobby
SD 39	SD 40	19 <sup>th</sup> Floor Lift Lobby
SD 41	SD 42	20 <sup>th</sup> Floor Lift Lobby
SD 43	SD 44	21 <sup>st</sup> Floor Lift Lobby
SD 45	SD 46	22 <sup>nd</sup> Floor Lift Lobby
SD 47	SD 48	23 <sup>rd</sup> Floor Lift Lobby